

How to Remove a Master Wrap



Step #1

- Open the front cover and press/hold the drum rotator button until it beeps.



Step #2

- Gently grasp blue handle at the top of drum unit and pinch with two fingers to release.




Step #3

- Pull back slowly exposing the drum unit from the machines core.



Step #4A


- Lift metal tab allowing the drum to rotate.

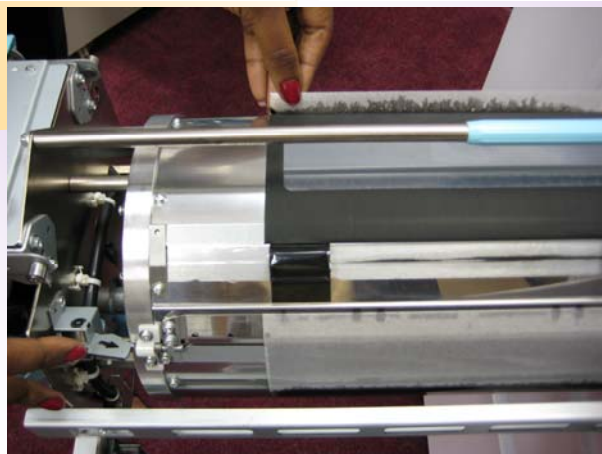

Step #4B

- Use two fingers to pinch the existing master and pull until it completely removes from the drum.

How to Remove a Master Wrap Continued.....

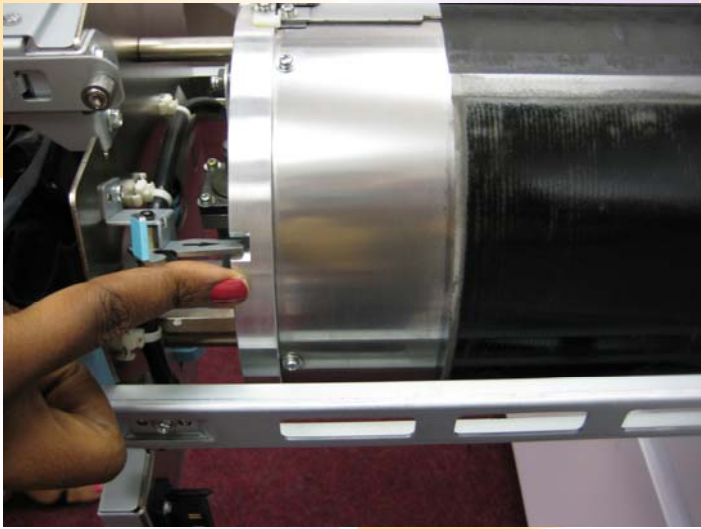

Step #5

- Turn drum unit one full circle until metal tab locks in place.

Step #6

- With two fingers push top of drum until completely in.
- Close front door.

Thank you so much for following our easy guide. If you have any questions please contact us at 888-463-8756 for any additional technical support.